

Mounting: POLLOPAS - Caster stand - fix -


1. step:

You need:

- 1 x hollow square tube
- 2 x sidepieces, L- shaped, hollow square tube
- Allen key
- 2 x Allen head screws M8
- 2 x castors

Put the hollow square tube on the ground. Set the L-shaped sidepiece on it, the shorter part is down. Put the Allen head screw through the big hole of the L-shaped sidepiece and screw the two tubes together. Repeat the procedure with the second L-shaped sidepiece.

Important: Screw the light hollow square tube on the shorter part of the L-shaped sidepiece and the heavy square tube on the end of the long side of the L-shaped sidepiece. Otherwise the caster stand may tilt over.

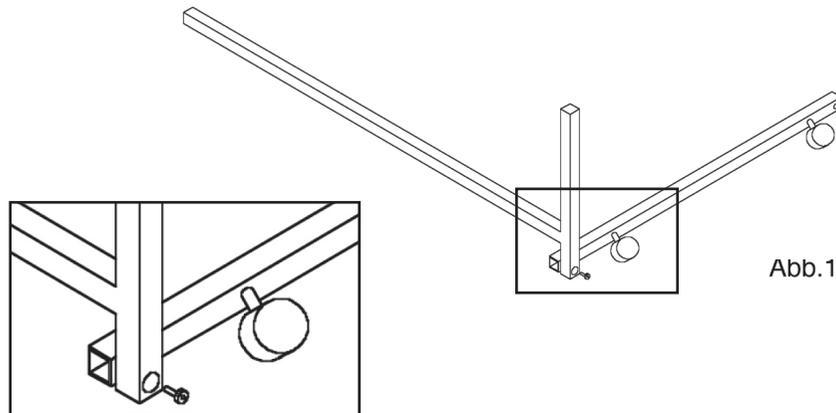


2. step:

You need:

- 1 x hollow square tube
- Allen key
- 2 x Allen head screw M8 (take the black screws by the length of 150 cm!)

Set the hollow square tube on upper part of the both L-shaped sidepieces, put the Allen head screws through the big holes and crew the hollow square tube and the both L-shaped sidepieces together.

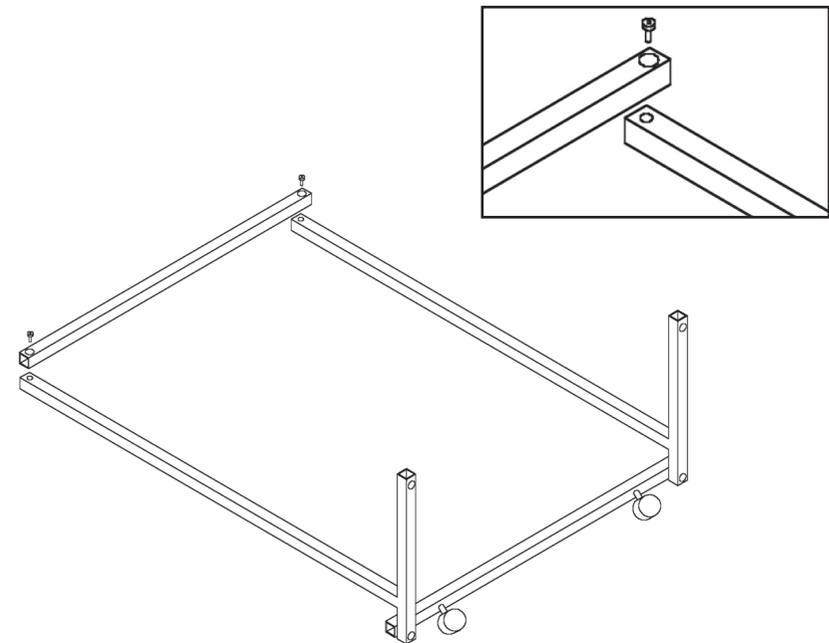

Mounting: POLLOPAS - Caster stand - fix -

SECO SIGN GmbH

manufacturing LAB

Manufaktur für Kunststoffspiegel . Möbeldesign

3. step:

You need:


1 x heavy square tube with screws and castors

Allen key

2 x Allen head screws M8

2 x castors

Turn now the caster stand. Set the heavy square tube (pos. 2) with the below side on the long part of the L-shaped side-pieces (pos. 1). Take the screws out, put these screws through the big holes (pos. 1) and screw the pos. 1 and pos. 2 together.

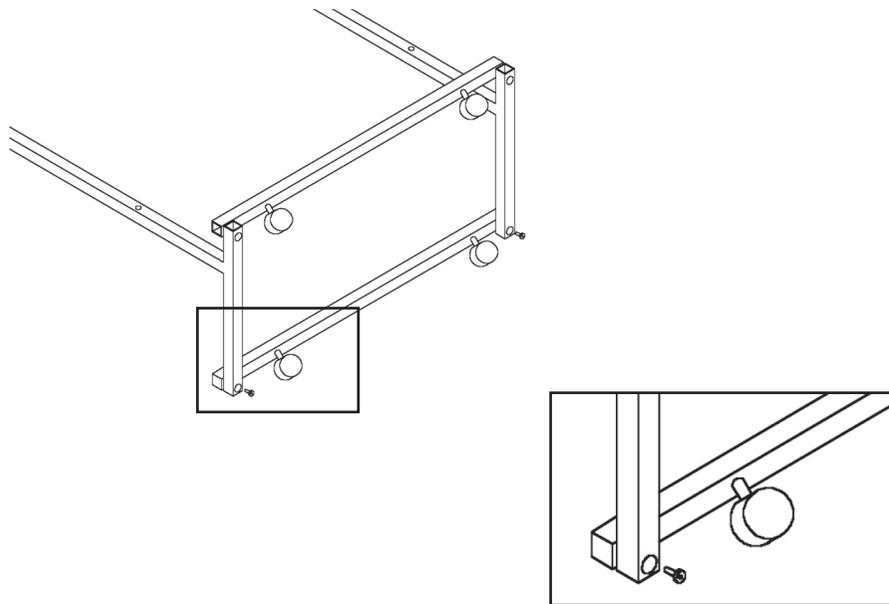

4. step:

You need:

1 x POLLOPAS mirror

4 x Allen head screws M5 with rip

4 x washer

slotted screwdriver

Stand the caster stand up. Screw the mirror together with the caster stand. The POLLOPAS mirror caster stand is now ready-made.

